




## **Sensor Components:**

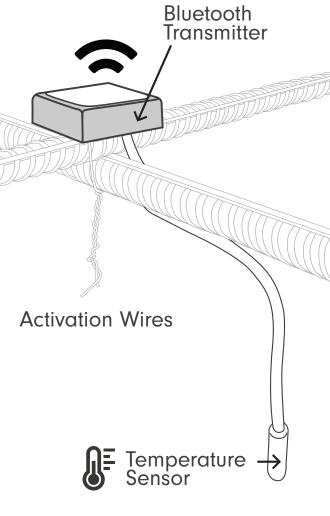



Scan QR code to watch installation videos

### **Checklist**

1	Add Sensor
	Twist wires together to activate sensor.
	To add sensor to your mobile app, select + New Project, + New Section, and + New Sensor. Then select and name the sensor. Select Done.
	Untwist the sensors' wires to preserve battery and memory.
	Write the name of your sensor on the physical product, if desired.
2	Install
	Choose a rebar intersection to install your sensor on that is less than 2 inches (5cm) from the concrete surface.
	If installed deeper, a wireless signal cannot be guaranteed. Use a rebar chair/spacer to raise the height of the sensor, if needed.
	Install the sensor on the top of your rebar with the white label facing up towards the concrete surface. Twist the two metal wires together around the rebar 6-8 times using pliers. Hand twisting is not recommended as it can leave gaps between your wires, causing the sensor to disconnect.
3	Secure
	Secure the sensor in place using tape or plastic zip ties. Avoid using metal rebar ties as they can damage the cable.
	Run the temperature cable along the bottom of the rebar and secure.
	Check your sensor connection in the app

after installation and again once concrete

is poured.

### SmartRock<sup>™</sup> QuickStart Guide



#### **Add Sensor**


Twist wires together to activate sensor.

To add sensor in the mobile app, select;

→ + New Sensor

→ Select your sensor > Name > Done

Untwist the sensors' wires to preserve battery and memory.

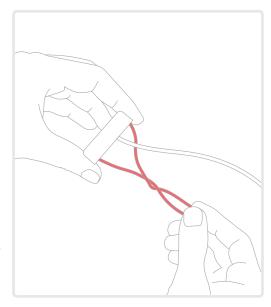




# 2


#### Install

Install on the top of a **rebar intersection** with the white label facing the surface of the concrete.

Install **less than 2 inches (5cm)** from the surface of the concrete.

Tightly twist the two metal wires together to activate.

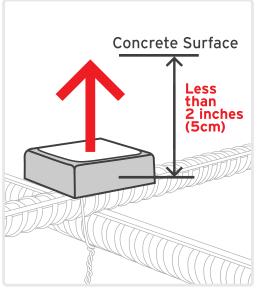

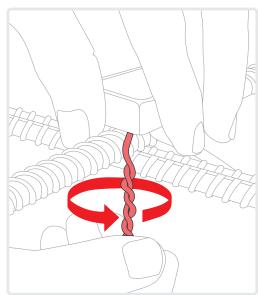



### **Secure**

Secure the sensor using **tape** or **plastic zip ties** so it doesn't rotate.

Run the temperature cable along the bottom of the rebar and secure\*.

\*Avoid using metal rebar ties as they can damage the temperature cable.

Questions? suppport@giatec.ca +1(877)497-6278

